



## **Measuring Cane:**

You can measure both tube cane and split pieces. Press the cane into the measuring tray and read the diameter on the dial.

## **Calibration:**

Included with the machine is an 8mm test bar. Press the bar in the measuring tray, if the dial does not read 8mm the machine must be re-calibrated.

- 1) Do not try to turn the dial face it is fixed in place.
- 2) Loosen the indicator set screw.
- 3) Press the test bar in measuring tray, then slide the indicator up or down in the holder until the dial reads 8mm.
- 4) Tighten the indicator set screw.