

Bassoon Low A Tube

Using the rubber band around the tube, put the tube in the end of the bell and play low Bb.

Tune the resulting low A by adjusting the length of tube extending out of the bell. This is done by sliding the rubber band up or down the tube. When you have determined the correct location, replace the rubber band with the self adhesive felt strip.

TEL: (510) 845-7178

FAX: (510) 845-7145